



INSTRUCTIONS

CONGRATULATIONS!

You have found a new Pixie friend! Your Pixie is going to need your help to grow up into a happy and healthy adult. Every Pixie is unique and they need your guidance to discover who they are. These instructions will help you along your way.

To activate the Pixie, pull the plastic tab from the back of the device.

LOW BATTERY

If you see the low battery icon flash on the screen your battery is low and needs to be replaced immediately. For best results change the battery once a month.



- INSERTING THE BATTERIES

To insert a new battery, remove the battery compartment cover on the back of the device. (To remove, unscrew the cover and lift it out of the device). Remove the dead battery by inserting a small object such as a paperclip into the small notch that can be found on the top left side of the battery compartment just above the contact. Then, insert one 3v "CR2032 button cell battery under the small rib in the battery compartment until you feel it lock into place. Finally, place the cover back onto the device and put the screw back in. Make sure to align "+" and "-" as shown. CAUTION: Batteries should be replaced by adult. Not suitable for children under 36 months, may contain small parts.

- TO ENSURE PROPER FUNCTION:

Battery installation should be done by adult. Non-rechargeable batteries are not be recharged. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.

SETTING THE CLOCK SUPER IMPORTANT!!!

- 1) When you first turn on the device, you will be in CLOCK MODE, ready to set the first hour.
- 2) Set the current time. Press LEFT/RIGHT to adjust the hour. When the correct hour is set, press ENTER.
- 3) Press LEFT/RIGHT to adjust the minutes. When the correct minutes are set, press ENTER.
- 4) It's important to make sure your time is set correctly because between the hours of 9:30pm and 7:30am the Pixie need to sleep and will refuse to perform other activities.

NAMING YOUR GIGA PIXIE

Now that your Pixie's has a birthday, it's time to give it a name!

- 1) Press LEFT and RIGHT to search through the alphabet.
- 2) Press ENTER to select a letter and move to the next space in the Pixie's name. You may use up to 5 letters.
- 3) Press ENTER twice to accept the current name and return to GAME MODE.

HOW TO PLAY

Your Pixie needs to play and be cared for to keep it happy and healthy. At various times, the Pixie will require certain kinds of attention from you. When the Pixie needs something it will beep and the ALERT icon will light up. Now you need to figure out what the Pixie needs!

If the Pixie is hungry, feed it. If the Pixie is lonely, play with it. If the Pixie is dirty, give it a bath. There are many different ways to interact with the Pixie. The trick is to figure out what your Pixie needs from you. The easiest way to do this is to check which stats are low. Use the LEFT/RIGHT keys to select an activity and press ENTER to select it.

If you try to select an activity that the Pixie doesn't want to do it may refuse. Keep trying other activities to figure out what it needs. Sometimes it just needs to nap. The Pixie will give hints so if you can't figure it out just watch it for a while and see what it does.

The Game Screen

The game screen is your Pixie's home. You will see the Pixie move around the screen and go about its daily routine. Press the LEFT/RIGHT keys to light up the icons around the outside of the screen. These icons represent all of the different activities that allow you to interact with the Pixie.

ADJUSTING THE CLOCK, NAME, AND SOUND

- 1) Press MODE to switch from GAME MODE to SETTINGS.
- 2) Press ENTER if you wish to adjust the time (clock will flash).
- 3) Press RIGHT after the clock and your Pixie's name will be displayed. Press ENTER if you wish to change your Pixie's name.
- 5) From there press RIGHT again and you will be taken to the sound. Press ENTER to turn the sound off/on.
- 5) Press MODE to return to GAME MODE.

FEED

When you select this activity, you will be given a choice of different foods for the Pixie. Use the LEFT/RIGHT key to select a food. Press ENTER to feed it to the Pixie.

SLEEP

A couple times a day your Pixie will want to sleep. Select this icon to put the Pixie to sleep. You should put it to sleep at 9:30pm and wake it up again in the morning. Sometimes it is also good to let it nap after lunch.

DOCTOR

Even magical creatures can sometimes get sick. If your Pixie is ever feeling under the weather select this activity to take them to see Dr. Troll.

CLEANING

Sometimes your Pixie will leave droppings, and you must clean them up. If there are droppings on the screen, select the BATH icon to clear them away. If there are no droppings on the screen, you can select this activity to give your pet a thorough, all-over cleaning. If you want your Pixie to stay healthy, don't leave droppings lying on the screen, and don't let your Pixie walk around dirty.

PLAY

To keep your Pixie healthy and happy, you should play with it often. When you select this activity, you will see four different games which you can play. As your Pixie evolves so will the games as they will become progressively more difficult. Press LEFT or RIGHT to scroll through the games and ENTER when you find the one you would like to play. If you successfully complete a game you will receive a CLOVER which can be used to help you make potions.

- GAME ONE: SAVE THE FOREST

Quick! There has been a break in the river dam and it's your job is to save the Pixie village from the impending wave! In this side scrolling game you will see your Pixie fly into the air and move either from the left side of the screen to the right or from the right side of the screen to the left. As you fly and scroll towards one side of the screen you will see the raging rivers edge move towards you. The goal is to make it towards the edge of the forest and lift the safety dam wall to stop the water from getting in. As you fly you must move to avoid objects and obstacles. Press LEFT to move up RIGHT to move down and ENTER to shoot magic at trees in your path. When you get hit by an obstacle it will slow you down a little and the raging water will get a little closer to you. If you are not fast enough or if you get hit enough the water will wash over you and you will lose. As your Pixie evolves the course will get progressively longer and the amount of obstacles will increase.

- GAME TWO: FISHING AND FEEDING

In this game your goal is to feed your hungry Troll friend. To do so you will have to catch fish and feed them to the Troll. When the game begins you will see the Pixie drop a fishing line in the water. Fish will appear on the left and right side of the screen. You must move the fishing hook to the fish using the LEFT and RIGHT buttons. Once they are on the hook then you must pull them out of the water using the ENTER and feed it to the Troll. As your Pixie evolves you will have to catch progressively more fish to satisfy the Troll and complete the game.

- GAME THREE: SKY FALL

In this game the Pixie will fly high into the air and then dive back to the ground. When falling to the ground the Pixie must go through rings. If you miss one of the rings you will lose. So, as the Pixie falls to the ground you must use the LEFT and RIGHT buttons to pass through the rings. A little arrow will appear on the screen to indicate which direction you should move to find the next hoop to fly through. After you make it through all the required rings you will land on the ground safely. As your Pixie evolves you will have to go through progressively more rings to complete the game.

- GAME FOUR: FOREST MAZE

 
In this game the Pixie is lost in the forest and must fly around to find their way out of the maze before time runs out. To move the Pixie through the maze press the RIGHT button to move right, the LEFT button to move left, the ENTER button to move up, and the MODE button to move down. As the Pixie evolves so will the maze as it becomes longer and more difficult to complete.

MAGIC

Under this section you be able to perform MAGIC. Within the magic section you can cast weather spells or mixing potions.

- SPELLS:

Under the spell section you will see a map that will bring you to 3 weather mini-games. Use the wand to select which game you would like to play. The goal is to match two of the same weather icons to cast a spell. For example, if you want it to rain you need to match two rain clouds. If you cast the spell correctly you will then see the weather event appear on the screen and you will be given a item that can be used to make a potion. That item will automatically be store in your inventory. If a spell done incorrectly you will lose 5 HEALTH, 5 HAPPINESS, and 10 LUCK stat points.

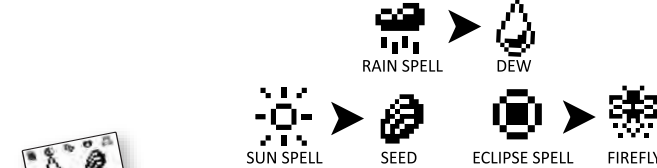

- POTIONS:

After selecting the MAGIC icon if you click LEFT or RIGHT you will be presented with a cauldron. In this section you will be able to mix the ingredients you have collected to make potions. These potions will help you along your evolution path. Use the LEFT button to scroll through your collected ingredients on the left side, and the RIGHT button to scroll through ingredients on the right side. When you have selected your two ingredients press ENTER to brew the potion. Once the potion is made you can either use it or mix it with another potion. If you mix two ingredients that don't go together they will explode and you will not create anything.

 


INVENTORY

When you select the bag icon, you will be taken to the INVENTORY. In this section you can see all the ingredients you have collected. You can only hold a maximum of 3 of each type of ingredients. You will also see the potions you have made here if you have not used them in the Potion section of MAGIC. If you want your Pixie to drink a potion simply scroll RIGHT or LEFT until you find the potion you are looking for and then press ENTER.

HEALTH

Choose this icon to check on your pet's progress. Your overall score, which is an indication of how well you are doing, is displayed first. Use the LEFT/RIGHT keys to display screens showing your pets HUNGER, HAPPINESS, HEALTH, LUCK, OVERALL SCORE, and AGE. Every score except for age ranges from 0 (bad) to 100 (good) and help you determine what your pet needs.

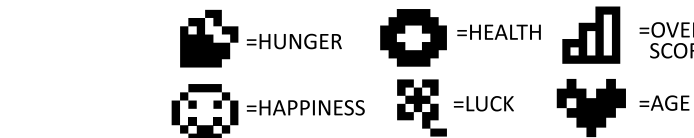


If 2 or more of your stats (HUNGER, HEALTH, HAPPINESS, or LUCK) fall below 60 your Pixie will transform in to the evil Pixie named Thorn. To get rid of Thorn and transform back into your current stage of evolution simply give your Pixie what it needs to raise your scores back above 60. The last statistic screen is the AGE. Each day represents one year in Giga-Time.

PRO TIP: LUCK is your most important stat because if it drops to 0 you will not be able to brew or take anymore potions until the next day when your LUCK stat refills back to 80. For each potion you brew it will cost you 20 LUCK points but you can gain back 40 LUCK points by taking a LUCK POTION.

EVOLUTION TREE

 Chose this icon to view the overall evolution tree. As you scroll through the tree Pixies that you have not yet evolved into will be shown as silhouettes. Flashing evolution branches will indicate which evolution path you are currently moving towards. Taking different combinations of potions will influence which evolution path you are on. It's important to note that it takes 3 days for your first Pixie Evolution (4 days for the second Pixie to evolve to the next Pixie) and you have to use at least one potion a day to move toward the next evolution. It is best if you use two potions a day to improve our daily evolution process. However, on the third day, you can mix three and use three potions to confirm your evolution to the next Pixie. You must also keep your stats above 80% each day to continue on your path and your bar needs to be full to evolve.

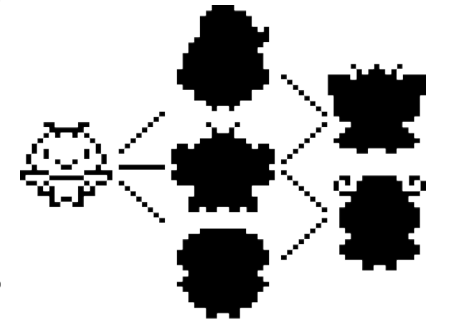

ALERT

You cannot choose this icon. Instead, this icon will light up to let you know that your Pixie needs something.

GAME OVER

The game is over when your Pixie dies. If your Pixie dies from poor health, you should restart the game and try again, taking care to pay close attention to your Pixie's needs. Your Pixie is designed to live for about 2 weeks. However, if you take very good care of your Pixie, it may live longer. Keep your Pixie's health above 95 and it may live for months. When the game is over, you will see your Pixie turn into an angel. Press the "mode" key to display your final score. Press the key again to go back to the angel screen.

RESTARTING THE GAME

If your Pixie dies and becomes an angel, press ENTER to restart the game, or if you just wish to start over from the beginning, press MODE and then click the RIGHT button till you enter the RESET screen. Then, press the LEFT button to select YES and then ENTER twice and you will be brought to the beginning of the game.

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: Change or modifications not expressly approved by the manufacturer responsible for complaints could void the user's authority to operate the equipment.

WARNING: This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any of the body, seek immediate medical attention.

Contact hello@topsecrettoys.us with any issues

TOP SECRET TOYS
GigaPets Pixie™ and GigaPets® are trademarks of Rehco, L.L.C. under license to Top Secret Toys International Ltd., Room 307, Heng Ngai Jewelry Centre, 4 Hok Yuen St. East, Hung Hom, Hong Kong. GigaPets Pixie™ are manufactured by Top Secret Toys International Ltd. TM denotes US Trademark registration under license from Rehco, L.L.C. ©2017 Rehco, L.L.C. Chicago, Illinois 60607, USA.

MADE IN CHINA

GET MORE EXCITING TOYS AT WWW.TOPSECRETTOYS.US